


# GARN® Electric Heating Package Owner's Manual

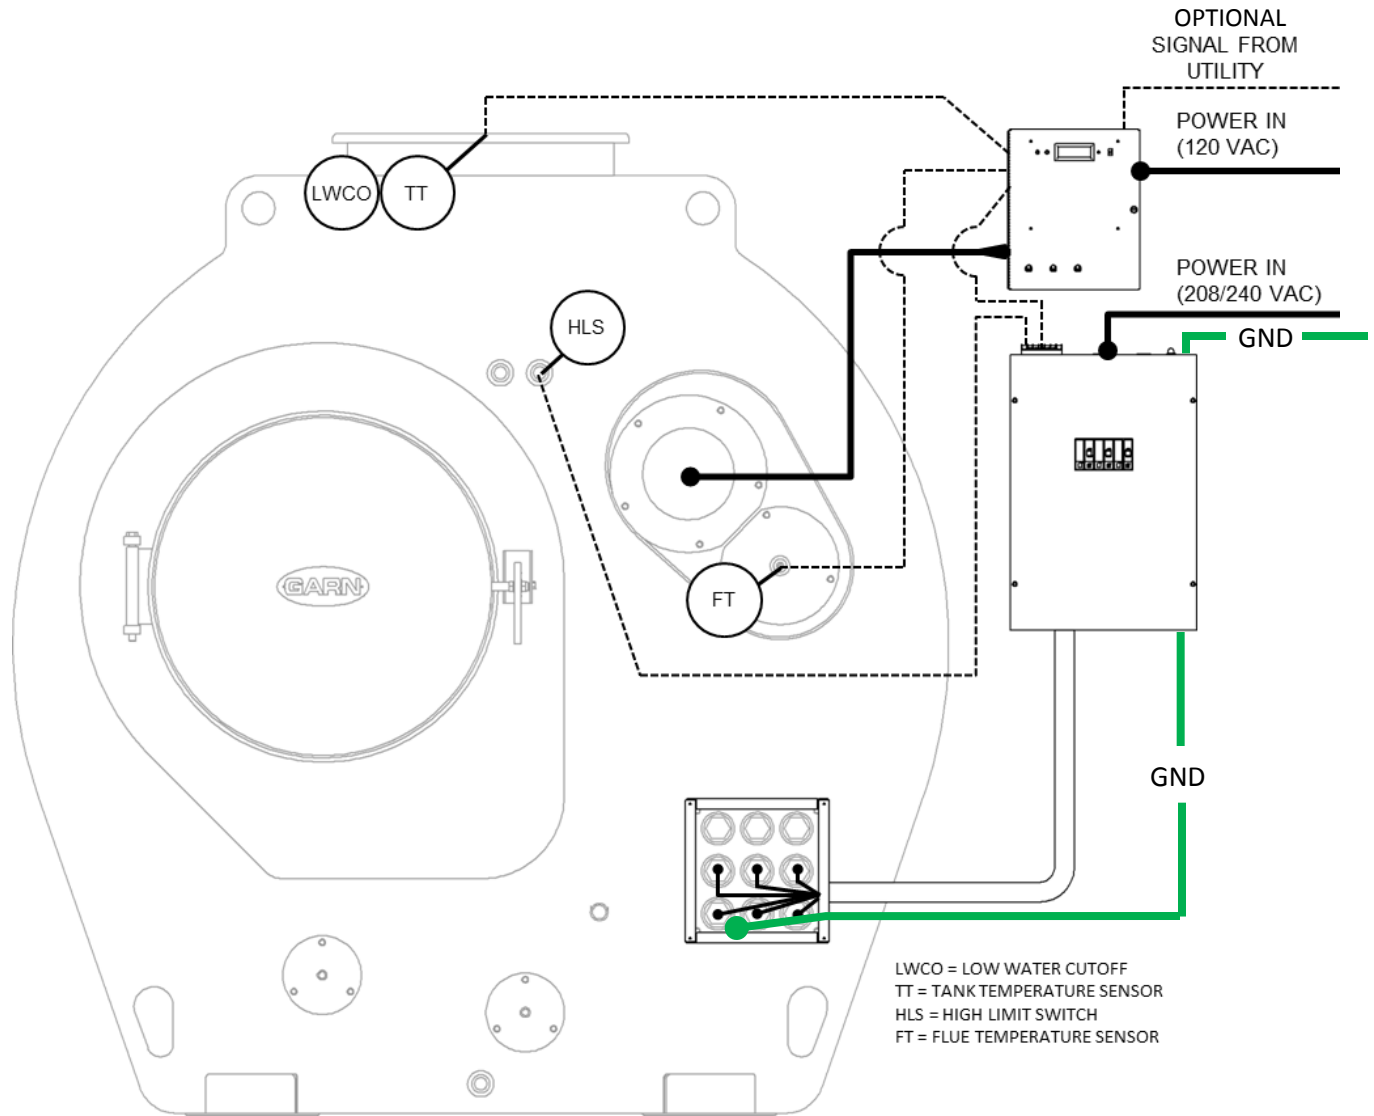

DECTRA CORPORATION • St Anthony, Minnesota 55418

Phone: 612-326-1100 • [www.garn.com](http://www.garn.com)

©2019 DECTRA CORPORATION. All rights reserved. No part of the contents of this manual may be reproduced or transmitted in any form or by any means without the written permission of DECTRA CORPORATION.

## OWNER'S MANUAL FOR THE GARN® WHS ELECTRIC HEATING PACKAGE

Thank you for purchasing GARN® equipment. Carefully read this manual. It contains instructions about how to install, operate, and maintain your GARN® WHS Electric Heating Package. Please compare your packing list with the delivered items. Contact your dealer, DECTRA CORPORATION, and shipper immediately if any items are missing or damaged.

## TABLE OF CONTENTS

<b>A. PURPOSE OF THIS MANUAL:</b>	<b>3</b>
<b>B. EQUIPMENT, COMPONENTS AND CONTROLS OVERVIEW:</b>	<b>3</b>
AVAILABLE HEATING PACKAGE SIZES:	3
WHAT IS PROVIDED WITH THE ELECTRIC HEATING PACKAGE?:	3
SCHEMATIC DIAGRAM OF EQUIPMENT, COMPONENTS, AND CONTROLS:	5
<b>C. CODES, INSURANCE, AND SAFETY SYMBOLS:</b>	<b>6</b>
<b>D. INSTALLATION</b>	<b>7</b>
GROUNDING:	7
<i>PREVENTING ELECTROLYSIS CORROSION REQUIRES PROPER GROUNDING AND ELECTRIC ISOLATION</i>	7
ELECTRIC ELEMENTS:	8
ELECTRIC ELEMENT BOX	8
SINGLE SEQUENCER:	11
DUAL SEQUENCERS	12
<b>E. OPERATION:</b>	<b>13</b>
WOOD OR ELECTRIC/WOOD OPERATION	13
TEMPERATURE SETPOINT ADJUSTMENT	14
<i>SW-1 DIAL SWITCH POSITIONS</i>	15
<b>F. WIRING DIAGRAMS:</b>	<b>17</b>
WHS/ETS DIGITAL CONTROLLER – REV A	17
WHS/ETS DIGITAL CONTROLLER – REV C AND D	18
SEQUENCER – 16.5 kW	19
SEQUENCER – 33.0 kW	22
SEQUENCER – 49.5 kW	23
IDENTIFYING YOUR BOARD REVISION	24
IDENTIFYING YOUR CHIP REVISION	24
CONTROLLER TO SEQUENCER WIRING – BOARD REV: UPC7115-A	25
CONTROLLER TO SEQUENCER WIRING – BOARD REV: UPC7115-C OR D	26
CONTROLLER TO OPTIONAL OFF-PEAK METER WIRING	27
USING AN AQUASTAT TO SET A CUSTOM DEADBAND AND SETPOINT	29
<b>G. WARRANTY</b>	<b>30</b>

## A. PURPOSE OF THIS MANUAL:

This manual is intended to be a reference for both the owner and the electrician/installer of the GARN Electric Heating Package. It provides the following information:

- Overview of operation and control logic
- Wiring diagrams and control schematics
- Answers to commonly asked questions

GARN has made off-peak heating equipment since the early 1980's. Off-peak heating works well with GARN wood equipment because the thermal storage is already built into the unit. Although the specific configurations of the GARN electric heating controls and packaging has been revised over the years, the operational philosophy and the way in which the controls physically interact with the utility has remained nearly unchanged. That means, that this manual can be applied to virtually any electric heating equipment system GARN has ever produced. But, the manual is specifically tailored towards the most recent revisions of controls and packaging.

## B. EQUIPMENT, COMPONENTS AND CONTROLS OVERVIEW:

Every GARN® WHS is shipped with threaded electric element flanges in the lower-right corner of the front head/face of the unit (on the WHS-3200, the flanges are located on the rear head of the unit). The flanges provide the opportunity to purchase the electric heating package and turn the GARN® WHS unit into an electric heating system. Electric heating can be used in conjunction with wood heating to provide a dual-fuel heating system. There are 3 electric heating package sizes to choose from. The correct size for your application depends on the utility/coop off-peak electric program, heating load, and GARN WHS unit size.

### AVAILABLE HEATING PACKAGE SIZES:

Electric Heating Package Size	Number of Electric Elements	Number of 16.5 kW Sequencers
16.5 kW	3	1
33.0 kW	6	2
49.5 kW	9	3

### WHAT IS PROVIDED WITH THE ELECTRIC HEATING PACKAGE?:

The Complete GARN Electric Heating Package comes standard with the following components:

- Electric Elements (3, 6, or 9 depending on heating package size selected)
- O-rings for elements
- Electric Element Junction Box
- Electric Element Junction Box Gasket
- Electric Element Junction Box Cover, Label, and Fasteners
- Sequencers (powers the elements on and off randomly)
- High Limit Switch
- Newest available Processor Chip for the Digital Controller

There are 4 main components that interface to create the GARN Electric Heating Package:

**1. WHS/ETS digital controller (supplied by GARN)**

The digital controller receives a signal from the utility indicating that off-peak power is available and then sends a signal to the sequencer to turn on the elements if certain criteria are met. The name “GARN WHS/ETS” on the digital controller label is derived from two acronyms: “Wood Heat Storage” and “Electric Thermal Storage”

**2. Sequencer (supplied by GARN)**

The sequencer turns the elements on one after another to provide a gradual power-up. The sequencer is composed of a series of breakers and time-delay relays. Power to the sequencer is supplied from an electrical panel (or directly from a utility meter) and is connected to the breakers inside of the sequencer. Then a pair of conductors is wired from the output contacts of the time delay relays to each element. One time-delay relay serves one element.

A single sequencer can serve up to 16.5 kW. In the case of the 33 kW or 49.5 packages, multiple sequencers are provided and both must be field installed and wired.

**NOTICE**

Two (2) sequencers are provided with the 33 kW package.

Three (3) sequencers are provided with the 49.5 kW package

**3. Electric Elements and Element Box (supplied by GARN)**

The Electric Elements are made of Incoloy®, a high-grade nickel and chromium alloy. The electric resistive elements are embedded in a lime and sand mixture inside of the Incoloy casing. The elements are Low-Watt Density which provides the safest and most robust option for heating with electricity.

**4. Power Supply for Electric Elements (from Electric Panel or directly from a Utility meter) (supplied by others – usually the utility)**

The power source for the electric elements must come from a building electrical panel or directly from a utility meter. The power is supplied to the sequencer, and the sequencer then distributes the power to the elements. If power is being supplied by a panel, then the panel must be properly sized and rated for the power draw of the electric heating package being installed.


**NOTICE**

etc.

The specific type of utility meter can vary based on the utility supplying the meter and the programs they offer: Smart Meter, Time-of-Day Meter, Off-Peak Meter,

## SCHEMATIC DIAGRAM OF EQUIPMENT, COMPONENTS, AND CONTROLS:

The diagram below shows a schematic overview of the Electric Heating Package and how it interfaces with the standard GARN Wood Heating Package. The diagram indicates what is provided with the Electric Heating Package and calls out the names of each of the components.

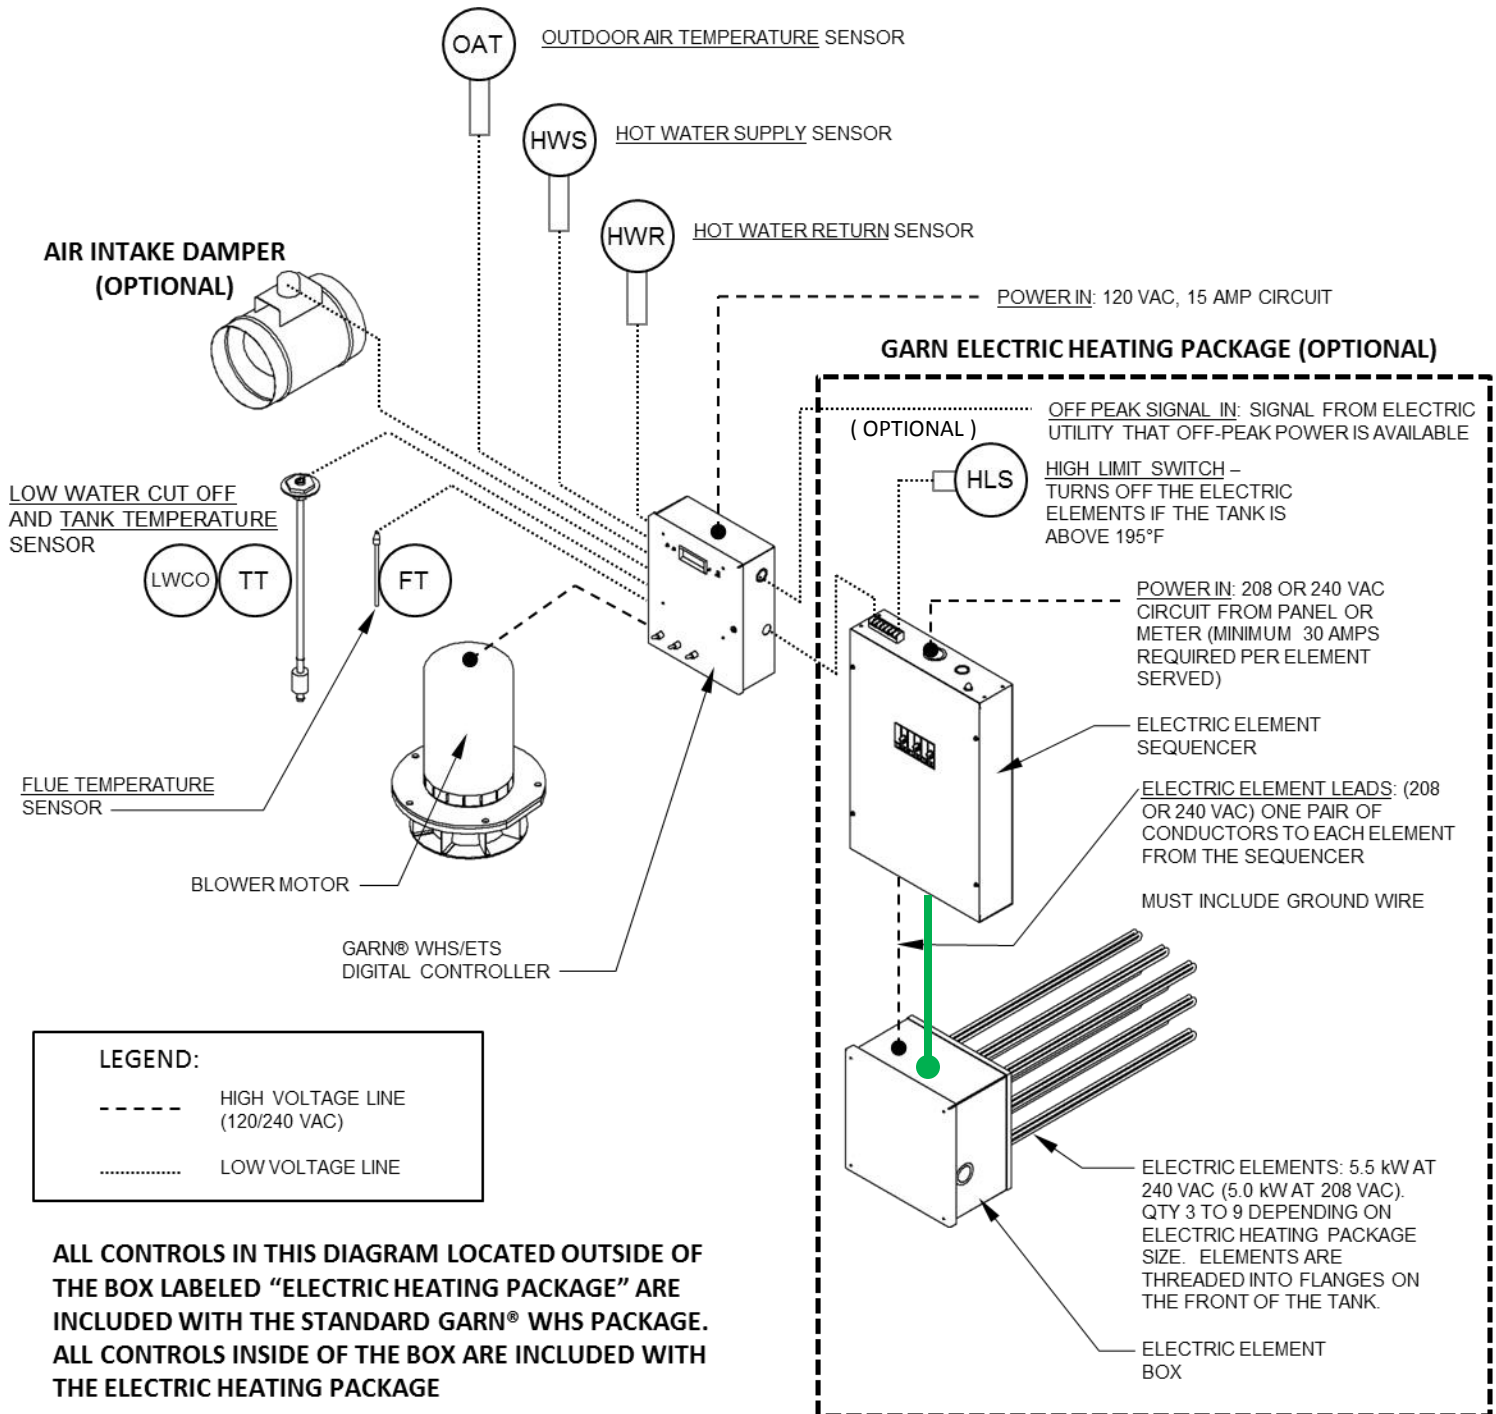

## C. CODES, INSURANCE, AND SAFETY SYMBOLS

The GARN® WHS Wood Heat Storage is listed by ITS/Warnock Hersey Testing Laboratory, Madison, Wisconsin according to ANSI/UL-391, UL-726 and CAN/USA B366.1-11. Install the GARN® ETS Electric Thermal Storage according to this manual, on-line technical bulletins, Federal, State and local codes, and your insurance underwriter's guidelines.



The GARN® unit, all related heating equipment (including pumps, piping, fan coils, hot water baseboard, radiant floor heating systems, etc), and all electrical equipment (including power wiring, controls, control wiring, back up electric heating, etc) must be installed by a qualified installer or licensed personnel in strict compliance with all Federal, State and local codes.



**THE WIRING AND INSTALLATION OF THE GARN® ETS ELECTRIC HEATING PACKAGE SHALL BE COMPLETED BY A CURRENTLY LICENSED ELECTRICIAN IN FULL COMPLIANCE WITH ALL SECTIONS OF NEC, FEDERAL, STATE AND LOCAL CODES.** The installer must keep in mind the following:

- All electrical equipment, devices and wiring installed with the GARN® unit must be UL/CSA listed. The installer is to supply and install all code required electrical overcurrent and disconnect devices.
- All wiring, controls, relays, transformers, enclosures, etc shall be UL/CSA listed and comply with NEC Class 1 600 V requirements.
- All heating element wiring shall be a minimum of 10 ga 600 VAC 105 C, stranded copper.
- All “female crimp connectors” shall be high temperature UL/CSA listed for electric heating equipment (such as [Hollingsworth SO9300](#)) and shall be installed utilizing the correct crimp tool. **DO NOT USE** standard crimp connectors as they will fail due to overheating.
- All wiring shall be in metallic conduit, sized per NEC with proper de-rating (for temperature, environmental conditions, etc)

This manual is intended to comply with NEMA Z535.6-2006 (the standard for *Product Safety Information in Product Manuals, Instructions, and Other Collateral Material*). Throughout the manual, a series of safety symbols are intended to call to attention the following types of information:



A **notice** provides a piece of information to make a procedure/process easier or clearer.



A **caution** emphasizes where equipment damage might occur. Personal injury is not likely.



A **warning** emphasizes areas where personal injury or death may occur but is not likely. Property or equipment damage is likely.



A **danger** emphasizes areas or procedures where death, serious injury, or property damage is likely if not strictly followed.

## D. INSTALLATION

### GROUNDING



THE STEEL TANK (GARN WHS UNIT) MUST BE GROUNDED TO THE SAME POWER PANEL THAT SERVES THE ELECTRIC ELEMENTS. **DEATH OR SEVERE INJURY MAY RESULT IF THE TANK IS NOT PROPERLY GROUNDED.**

### PREVENTING ELECTROLYSIS CORROSION REQUIRES PROPER GROUNDING AND ELECTRIC ISOLATION

GARN units no longer are supplied magnesium anode rods. The reason for this is many-fold; for further reading and explanation, please visit our Technical Service Bulletin page at:

<http://www.garn.com/technical-service-bulletins/>

Do **NOT** ground the GARN tank with an independent ground rod. Specific grounding procedures must be followed.

1. Ground the GARN tank and Element Box by attaching a properly sized ground wire to the steel mounting stud of the electric element box. Clean the stud and box to obtain a solid ground.
2. The grounding wire must go back to the sequencer(s) **and** power panel that provides service to the sequencer(s).



**DO NOT GROUND THE TANK TO ANY LOCATION OTHER THAN TO THE SAME LOCATION AS THE POWER SOURCE FOR THE ELECTRIC HEATING ELEMENTS.**

For further grounding details and illustrations on how to properly ground a GARN unit with electric heating elements, see the [ELECTRIC ISOLATION AND PROPER GROUNDING](#) section of the *GARN WHS Owners Manual* at: <http://www.garn.com/garn-whs-manuals/>

## ELECTRIC ELEMENTS

Electric resistance heating elements are rated for 240 VAC or 208 VAC. Power to each element must be supplied by a UL/CSA listed individual two-pole breaker with a common trip.

- 1.) Mount the electric heating elements in the 1" NPT fittings in the element box. Each element has an "O-ring" for proper sealing into its threaded plug.

### NOTICE

**DO NOT USE PIPE DOPE COMPOUNDS ON THE TREADS WHEN INSTALLING THE ELECTRIC ELEMENTS.** The pipe dope lubricates the O-rings and may cause them to dislodge, which may cause a leak. The use of a turn or two of Teflon tape is permitted. However, be sure the element can be inserted far enough to properly seat the O-ring, providing a good water tight seal.

- 2.) Install the elements in the lowest fittings possible to maximize storage. Plug any unused fittings with 1" NPT plugs (use pipe dope or Teflon tape to seal).



### CAUTION

**ONLY CONNECT STEEL CONDUIT TO THE ELEMENT BOX AS IT MAY REACH TEMPERATURES IN EXCESS OF 200°F.**


- 3.) Fill the tank with enough water to cover the elements and test for leaks.

### NOTICE

**ONLY OPERATE THE ELECTRIC ELEMENTS WHEN SUBMERGED IN WATER.** If they are turned on out of water they will burn out and require replacement.


## ELECTRIC ELEMENT BOX

The tank-mounted junction box comes with a insulation gasket, UL/CSA listed box, box cover, fasteners and labels.

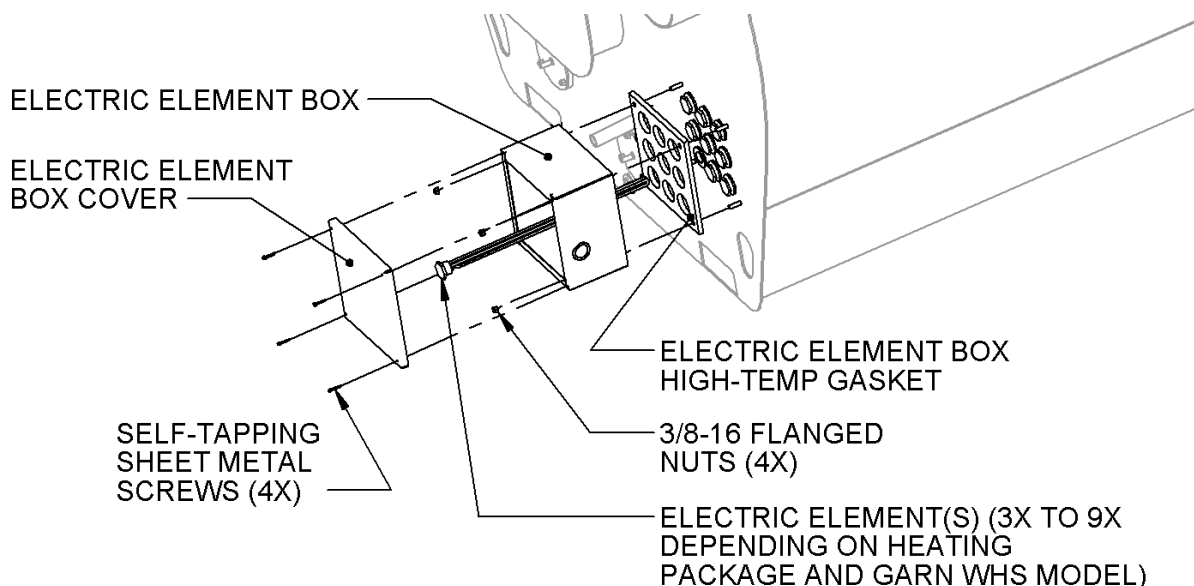



- 1) Follow the installation instructions in this manual for [Installing the Electric Elements](#). Ensure that electric elements or 1"NPT plugs are installed and test for leaks.
- 2) Place insulation pad over the bolts extruding from the tank.

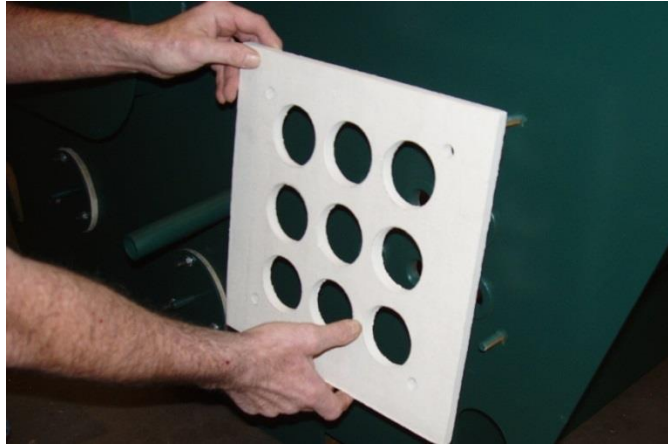

- 3) Align the junction box with the bolts and push against the insulation gasket.



- 4) With the nuts provided, tighten the box against the gasket until the gasket compresses slightly.



- 5) Affix the cover after leak testing and electrical installation.




## NOTICE

The label on the cover of the Element Box contains information about field wiring and safety notes. Follow the instructions on the label.




## SINGLE SEQUENCER

Mount the sequencer in close proximity to the digital controller and electric element box. Follow best practices for wiring and mounting the boxes. The intent of the following schematic is to give a general overview of the wiring involved. Refer to the [Wiring Diagrams](#) section of this manual and to the labeling on the controller and sequencer. All wiring should be performed by a licensed electrician.

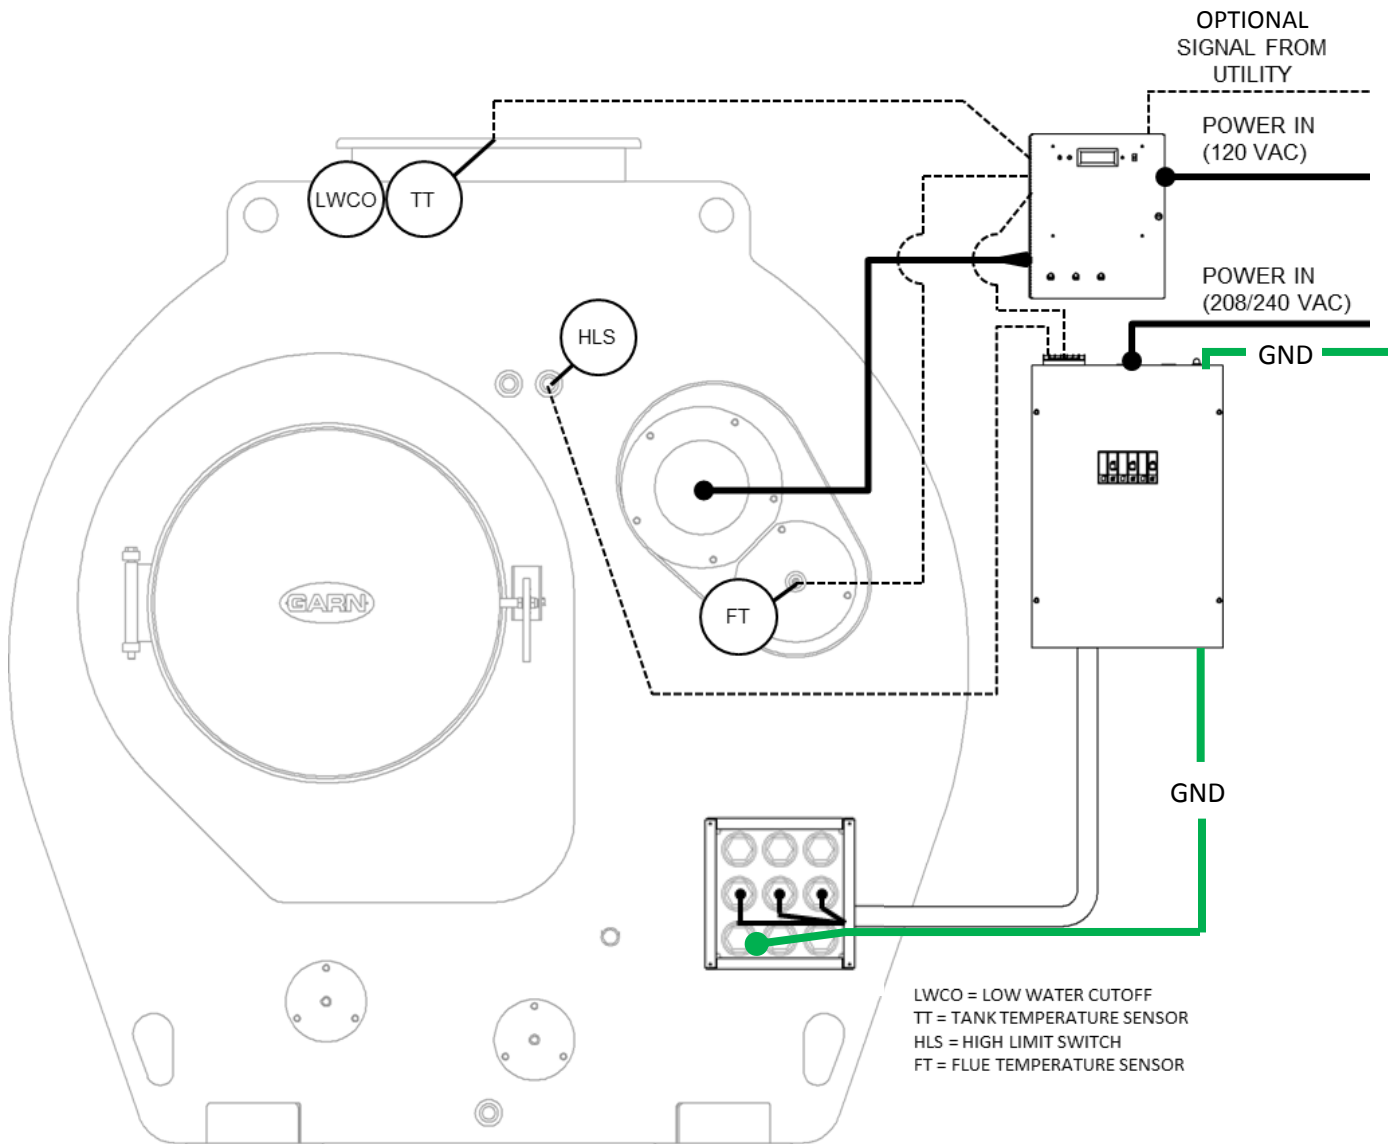


## DUAL SEQUENCERS

When connecting the 33 kW electric heating package, two sequencers are required. A metal conduit must be run from each sequencer to the electric element box. If needed, additional knockouts can be made into the electric element box using a knockout punch.

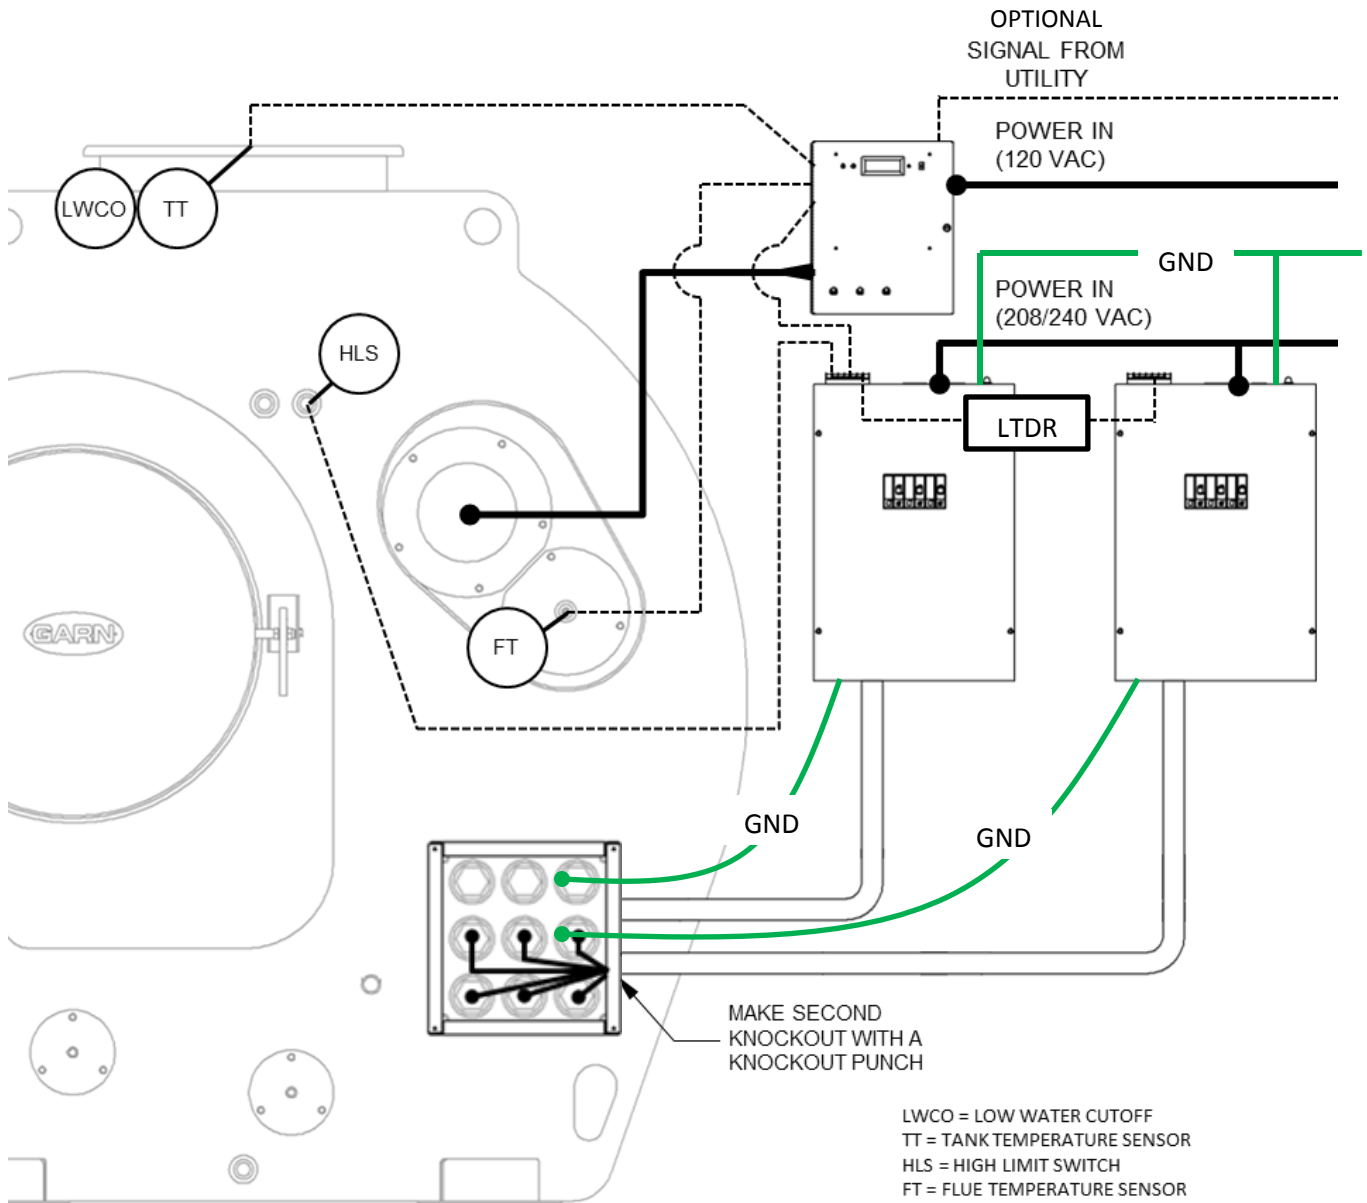

## E. OPERATION:

### WOOD OR ELECTRIC/WOOD OPERATION

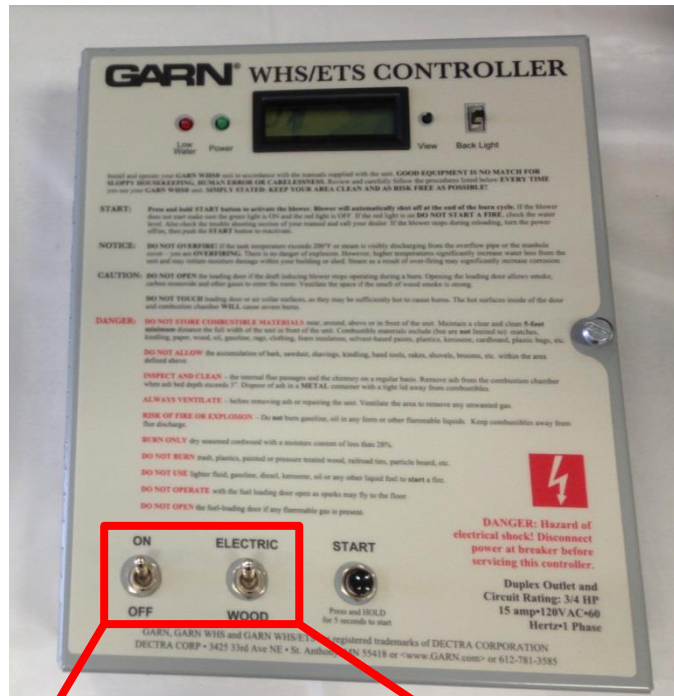

The picture to the left shows the front face of the GARN WHS/ETS digital controller and the location of the controller ON/OFF toggle switch and the WOOD/ELECTRIC toggle switch.



**ELECTRIC MODE:** Unit may be fired with wood, but it will also use electric for heating if available. If off-peak heating is available it will heat the unit according to the dial switch set point.

**WOOD MODE:** Unit must be fired with wood. The electric heating elements are **disabled**.

The digital controller can operate in **Wood** mode and **Electric/Wood** mode. In the Wood mode, the controller allows the operator to fire the GARN unit with wood and will NOT turn the electric elements on to regulate the tank temperature. In the Electric/Wood mode, the operator can still fire the GARN unit with wood, but, in addition, the controller will turn on the electric elements if the following conditions are met:

1. A **utility signal** tells the controller that electricity is available



**AND**

2. The tank temperature is below the **setpoint** temperature





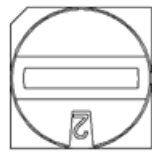

## TEMPERATURE SETPOINT ADJUSTMENT

The electric heating function of the GARN® WHS is controlled by the toggle switch on the front of the controller and the **dial switch** (labeled SW-1) on the PC board (see below).

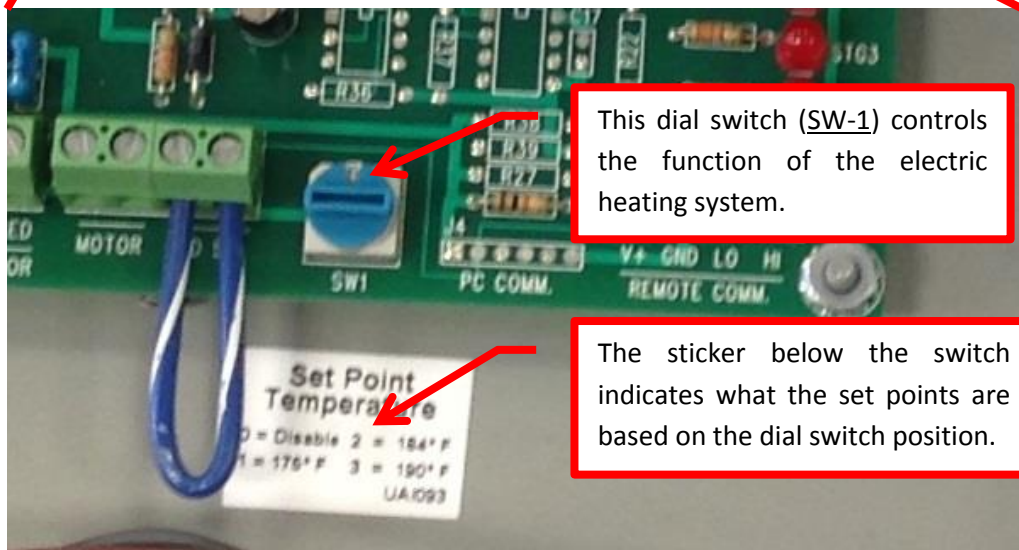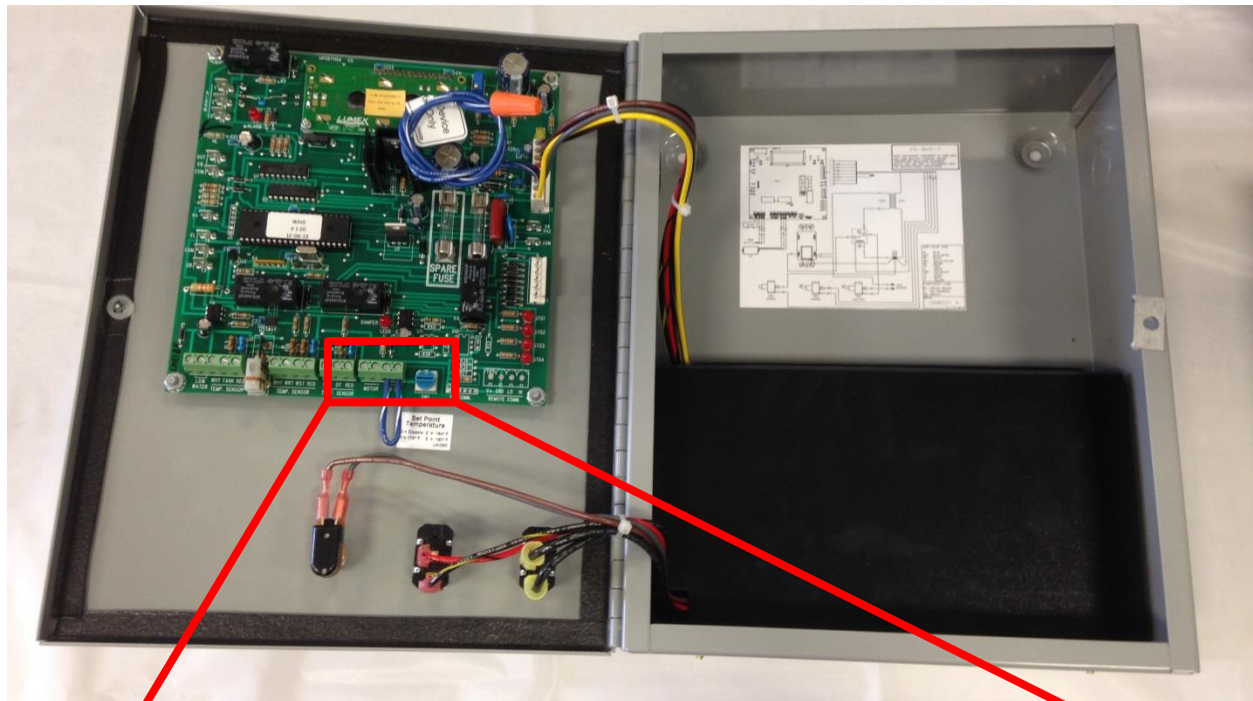

## SW-1 DIAL SWITCH POSITIONS

The dial switch (SW-1) controls the set point temperature of the Electric Heating Package. The set point temperature varies based on Chip Version **and** dial position. The dial switch may be rotated clockwise or counter-clockwise by hand (or by using a small blade screwdriver) to set switch to one of four desired positions. The switch position number will appear in the small indent on the base of the switch; only one number will appear at a time as the switch is rotated.

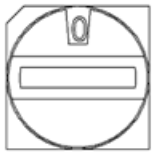Dial Switch Position	
Number	Visual Representation (SW-1)
0	
1	
2	
3	

### Set Point Temperature

Chip Version	"0"	"1"	"2"	"3"
V1.03	Disabled	175	184	190
V1.10	Disabled	OD reset	175	190
V1.20	Disabled	OD reset	175	190
V1.21	Disabled	OD reset	50	190
V2.0	Disabled	45	170	190

0, 1, 2 and 3 are the switch positions

All temperatures are in Degrees F

Confirm chip version before setting switch position

45F and 50F are for freeze protection only

**Disabled:** A setting of 0 means that the electric heating will **not turn on**. The controller will function the same as if the toggle switch on the front of the controller is set to "WOOD" mode. All chip versions.

**Freeze Protection Mode (45F):** Targets a tank temperature of 45F. Temperature differential (deadband) = 5°F. For instance, if off-peak is available, the electrical elements will turn on if the tank is 40°F or below and remain on until the tank reaches 45°F.

## NOTICE

The elements will not turn on unless off-peak is available. It is recommended that if the tank operates in freeze protection mode, the water in the piping connected to the unit be ***constantly circulated*** to minimize the potential for freezing (if the unit is located in a generally unheated space). Because the tank is insulated and has a large volume, there is little danger of freezing the tank even with a 16 hour or more carry-over between periods of electric availability.

**Maximum Heat Mode:** Targets a tank temperature of 170F or 190°F. Temperature differential (deadband) = 5°F. For instance, if off-peak is available, and the dial switch is set in position 3, the electrical elements will turn on if the tank is 185°F or below and remain on until the tank reaches 190°F.


**High Altitude Considerations:** In higher altitude locations the dial switch should be in position 2, and not 3 to minimize unwanted boiling.




## F. WIRING DIAGRAMS:

The diagrams in this section are intended to apply to the newest revision of the Electric Heating Package controls and components. For retrofit applications, or when using controls and components that are used, purchased second-hand, or known not to be of the newest revisions, consult the wiring diagrams and labels located inside the cover of the Sequencer and Electric Element Box. Follow the diagrams and directions provided on the labels with your equipment first before consulting the diagrams found here.

### WHS/ETS DIGITAL CONTROLLER - REV A

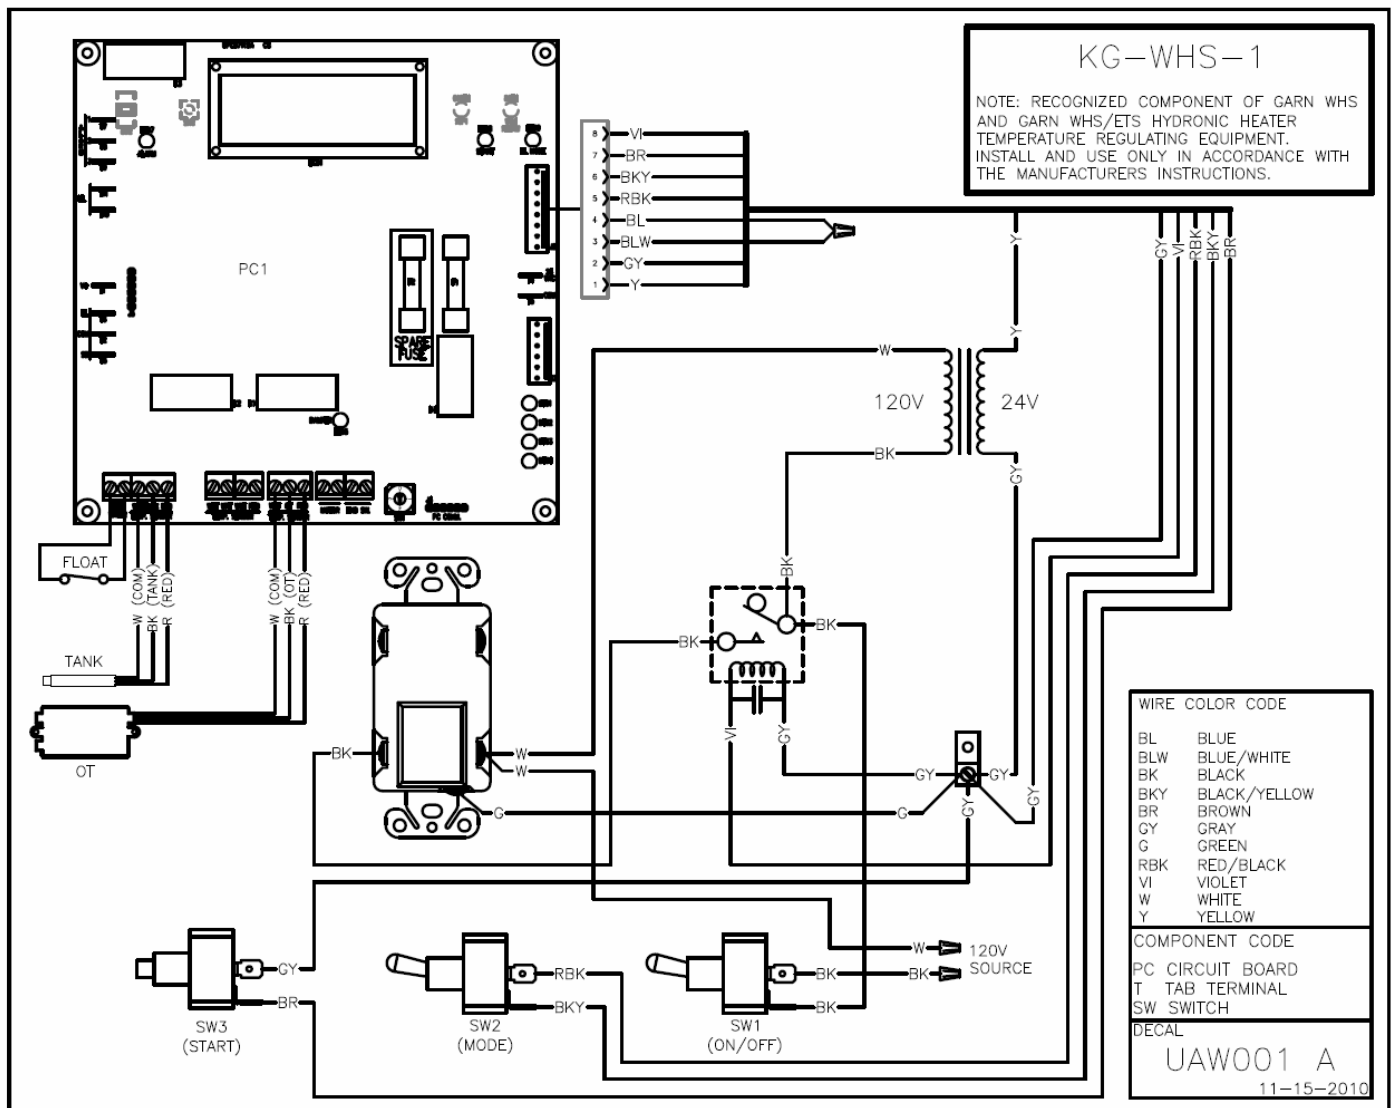


## WHS/ETS DIGITAL CONTROLLER - REV C AND D

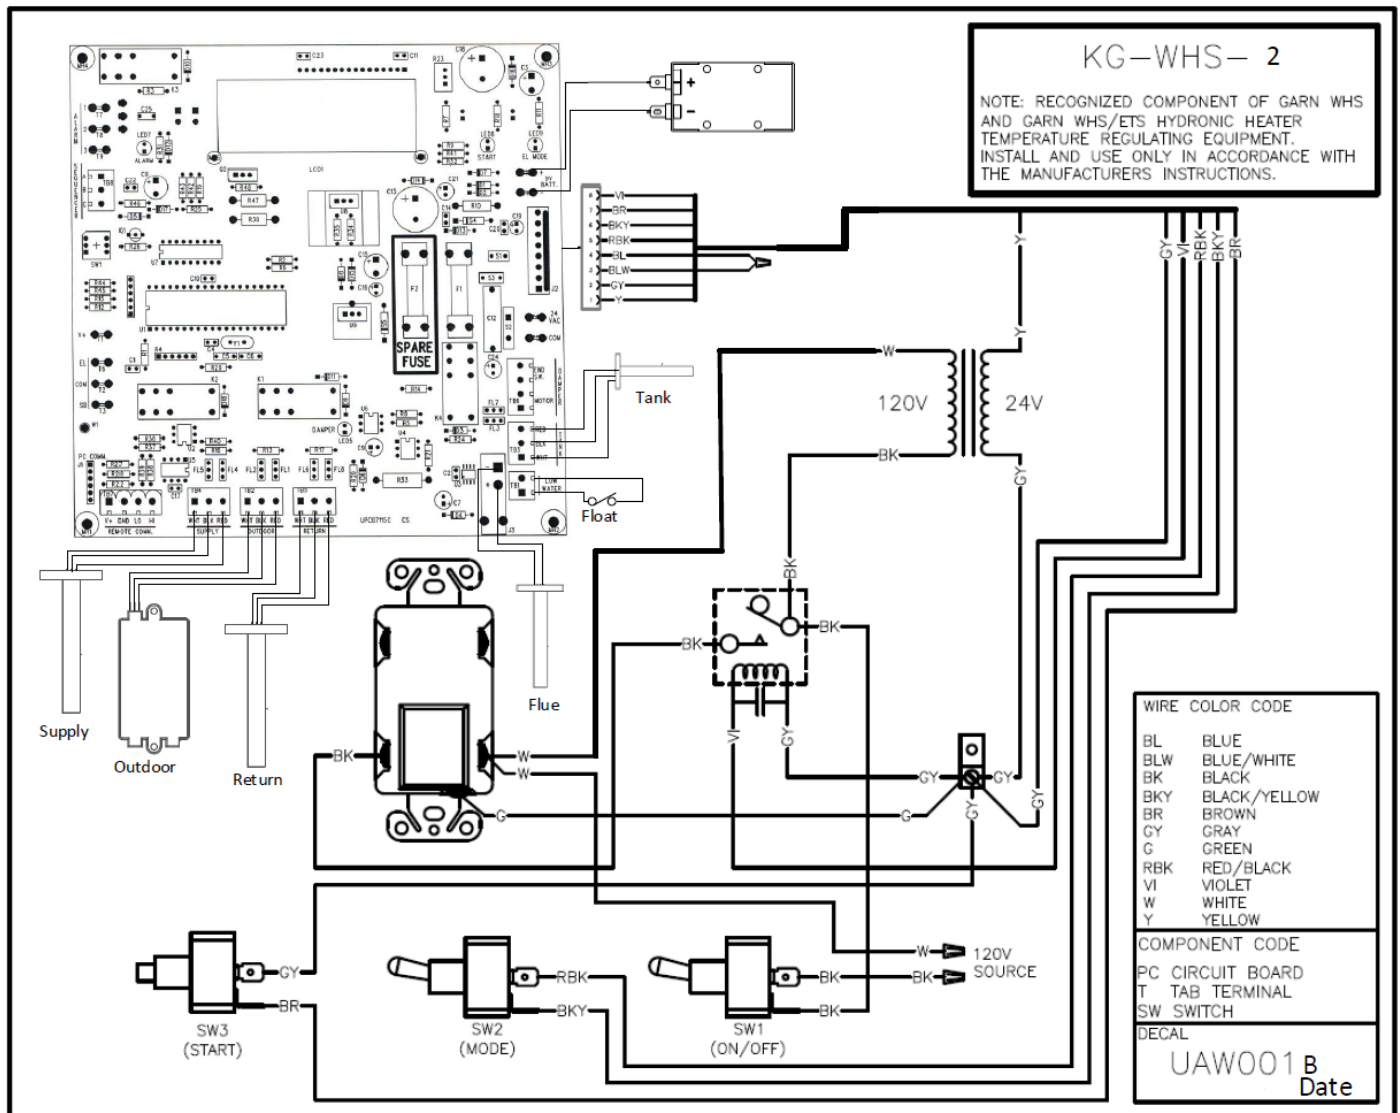

**POWER SPIKES** - If you live in an area of power outages, power spikes or potential lightning strikes, it is strongly suggested that you protect the electrical supply to the controller with a dedicated surge protector or surge protection breaker. Power spikes may damage the printed circuit board and render the controller unusable. Such events are not covered by the warrantee. This applies to all board and chip versions.

## SEQUENCER – 16.5 KW

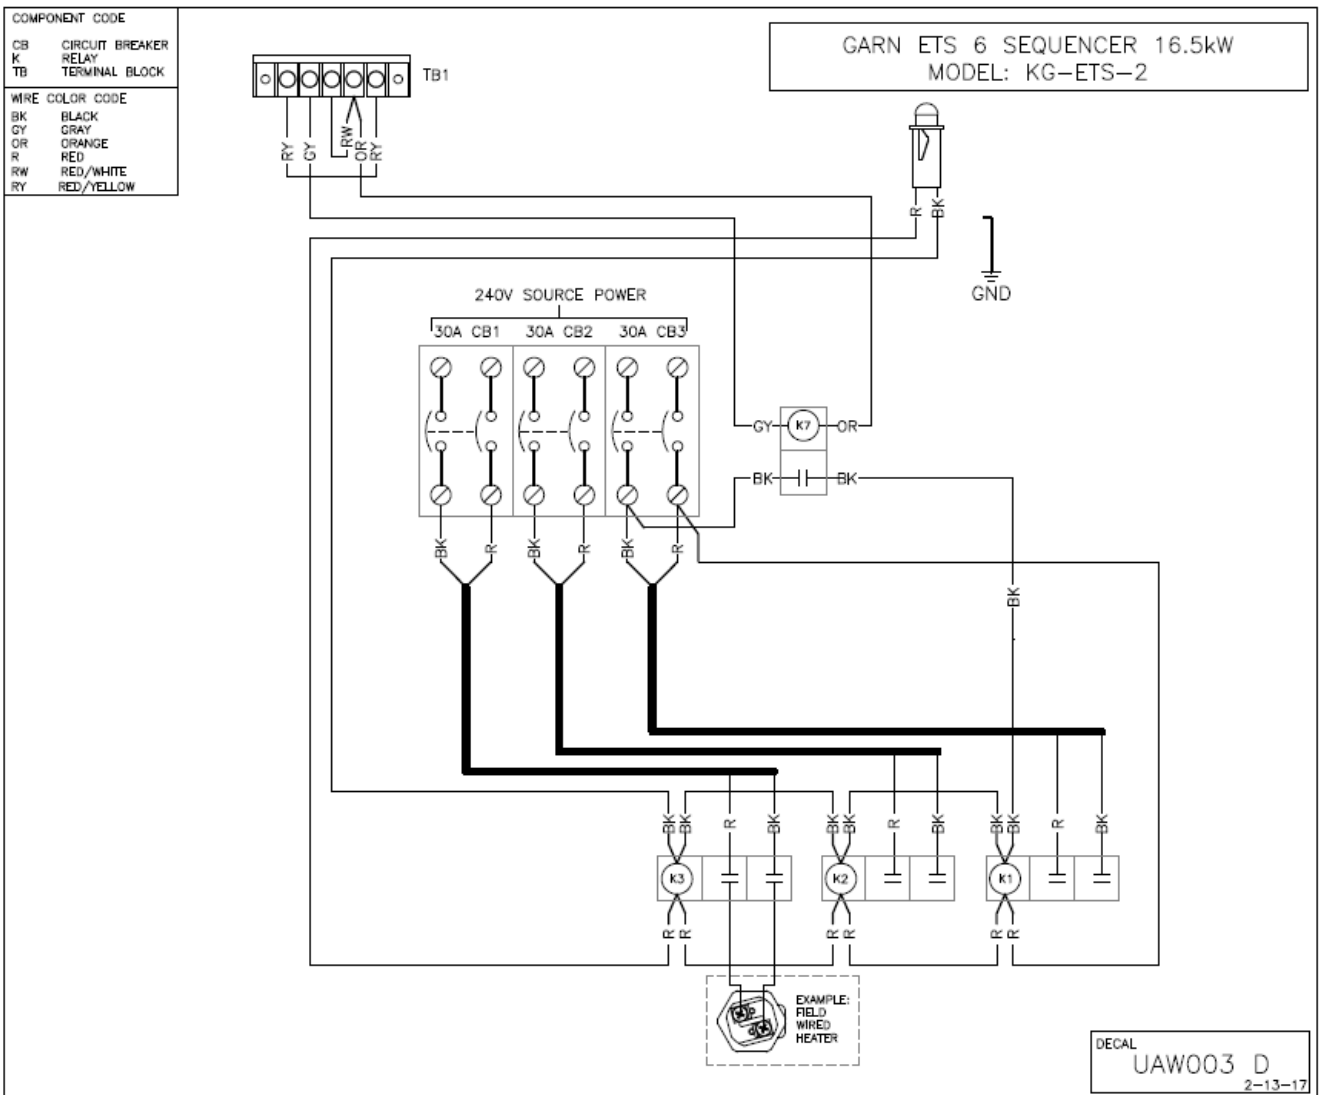


## SEQUENCER POWER SUPPLY


The 16.5 kW sequencer is supplied with a **Single Feed Buss Adapter** (SFBA) that allows the use of a single, protected 240 vac feed of sufficient capacity (90 amps for the 16.5 kW sequencer). In some cases this is not possible, or economical. Therefore, the SFBA can be **easily removed** so that each breaker within the sequencer can be fed by a dedicated circuit. After removing the plastic cover and the SFBA each of the 3 breakers within the 16.5 kW sequencer would be fed by a dedicated circuit, each circuit protected by a commonly available 30 amp breaker at the circuit source. This would require a total of 3 individual, protected 30 amp 240 vac circuits supplying power to the 16.5 kW sequencer. The following series of pictures illustrates this procedure.



This shows a single 16.5 kW Sequencer with cover installed as provided with the 16.5 kW Electric Heating Package.

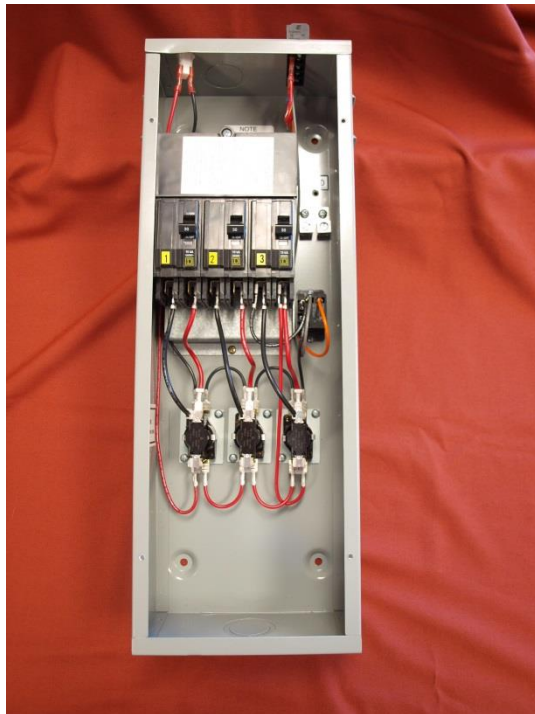

This shows the same 16.5 kW sequencer with its cover removed. Note the two ground lugs on the right side of the breakers. These are used to ground the GARN unit to the sequencer and the sequencer to the power panel that serves the sequencer. Usually only one of the two ground lugs is used. **Grounding is required in all cases.**

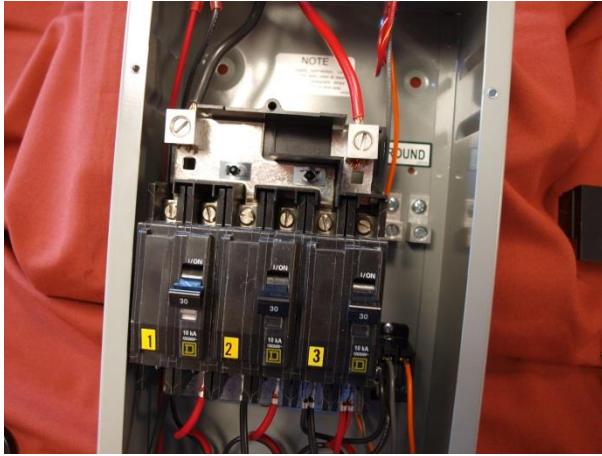

This shows a single 90 amp x 240 vac feed with the plastic safety cover removed. Tighten both main lug screws securely. The plastic cover must be reinstalled before the 90 amp feed circuit is activated. In all cases, follow the NEC for wire sizing. The ground wire is not shown for clarity, but **grounding is required in all cases.**



This shows removing the SFBA after loosening the six (6) slotted head, breaker screws. Be aware the screws were factory set quite tight.




This shows each breaker being fed by a dedicated 30 amp circuit. The plastic cover is not reinstalled in this case. Tighten all screws securely.

## SEQUENCER – 33.0 KW

The 33 kW heating package is made up of two (2) 16.5 kW sequencers wired as shown below. Follow the wiring diagrams for each individual sequencer from the previous sections. After the elements and high voltage wiring is complete, the two sequencers must then be wired to work together as shown below.

The signal from the digital controller is wired to first sequencer, which relays the signal thru a Littlefuse Time Delay Relay (LTDR) to the second sequencer. The sequencers are essentially wired in parallel; however, the LTDR (mounted on the upper right face of the first sequencer enclosure) prevents the second sequencer from activating concurrently when the controller calls for heat. This LTDR should be set at approximately 6 minutes, to delay activation of the second sequencer. This delay protects the electrical equipment from switching induced spikes. A single high limit switch is wired to the first sequencer.

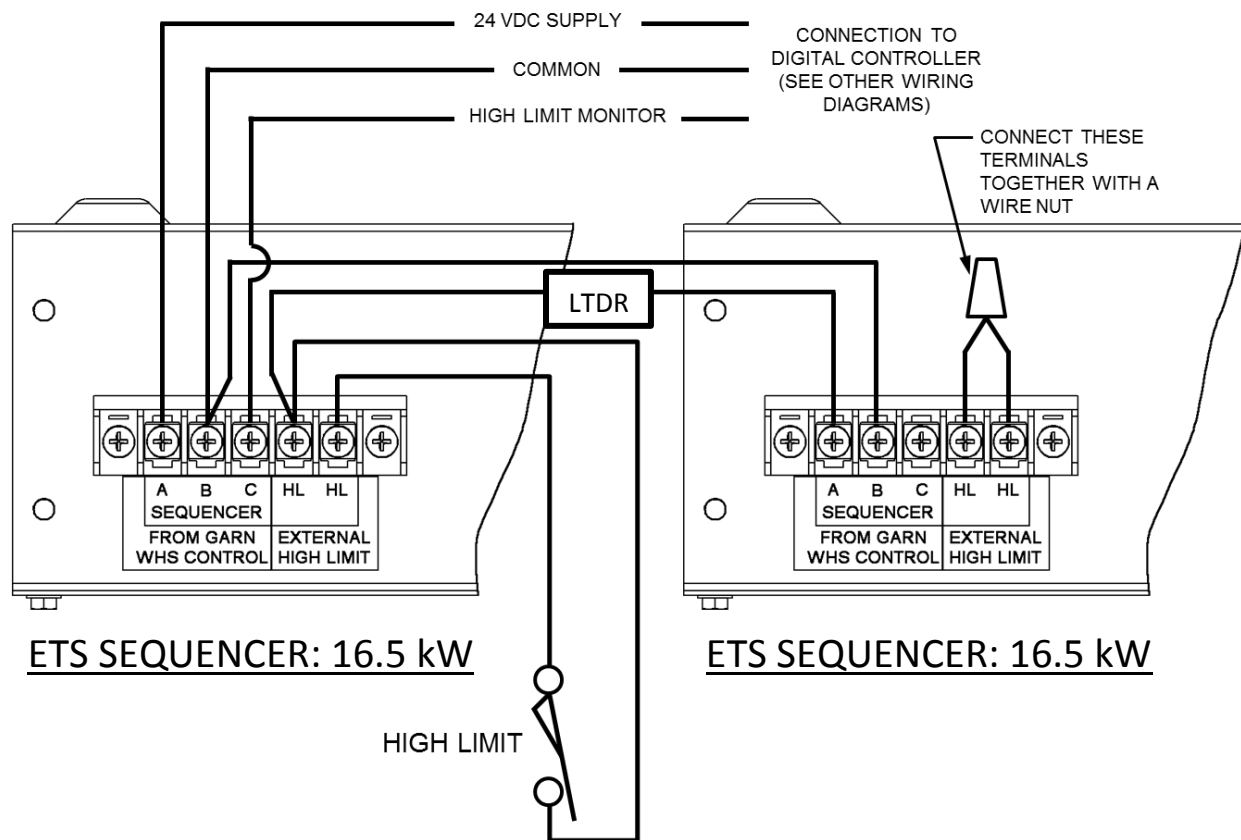

A picture of the two (2) sequencer 33 kW package is shown the following page.



This 33 kW heating package is made up of two (2) 16.5 kW sequencers wired together. The LTDR is mounted on the upper right face of the first sequencer enclosure and can be seen as the small black square.

## SEQUENCER – 49.5 KW

The 49.5 kW heating package is made up of three (3) 16.5 kW sequencers wired in parallel. However, in this case two (2) LTDR switches are used: one mounted on sequencer #1, controlling #2; and one mounted on sequencer #2, and controlling #3. Both LTDRs are set to provide a 6 minute delay between sequencers. Wiring is identical to that shown above. The single high limit switch is connected to the first sequencer; no other high limit switch is required.




This 49.5 kW heating package is made up of three (3) 16.5 kW sequencers wired together. The LTDRs (2 required) are mounted on the upper right face of the first and second sequencer enclosures, and can be seen as the small black squares in the above photo.




## IDENTIFYING YOUR BOARD REVISION

Your board revision will determine how the controller will interface with the sequencer. The identification for your board is located in one of two spots. The board number begins with “UPC7115” followed by the letters A, C or D. The letter indicates the revision of the board.

Revision UPC7115A has the label located here:

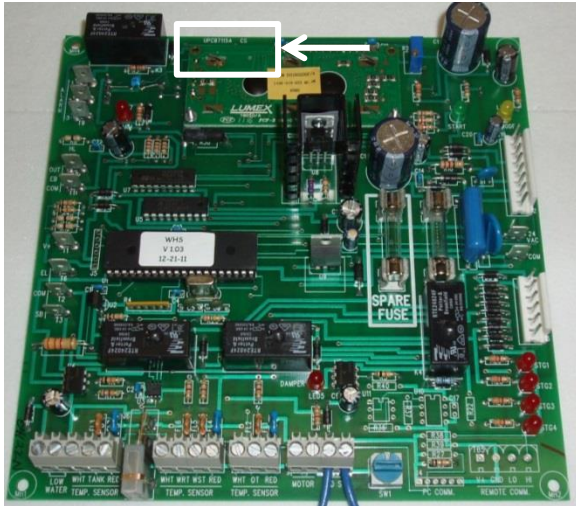


Revision UPC7115C or UC7155D has the label located here:

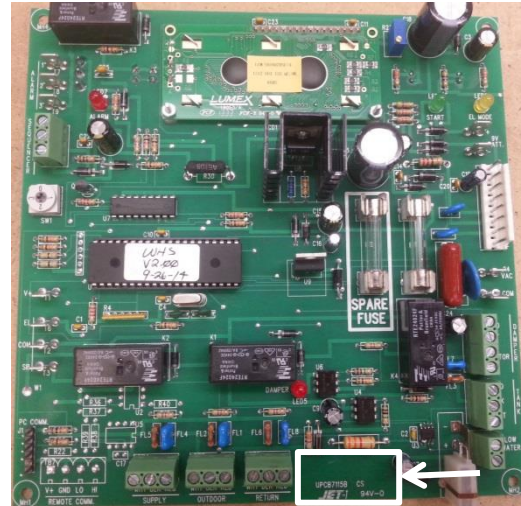

## IDENTIFYING YOUR CHIP REVISION

The digital controller has the feature of being upgradeable. The latest version of the chip is supplied with the purchase of the electric heating package. However, for reference, to identify the version of chip that is installed in your board, read the label adhered to the chip:

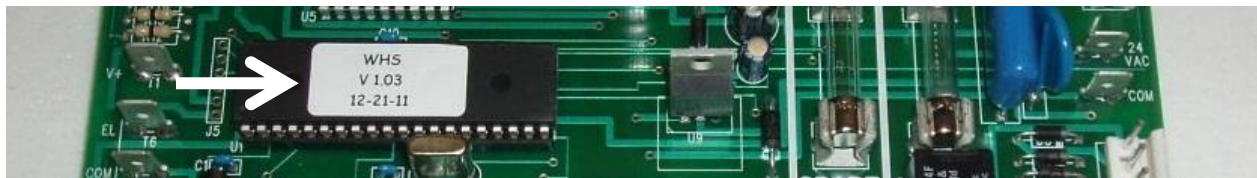

## REV D - Optional Battery Back-up for Power Outage Carryover


If you experience power outages, install a 9 volt battery in the holder provided. This battery will provide several hours of control logic carryover until commercial power is restored. It will **NOT** maintain blower operation; rather, it will maintain Controller logic. If the outage is short, the blower will reactivate when power returns; if the outage is long the blower may not reactivate. The Controller monitors temperatures and determines what to do when power is restored.




## CONTROLLER TO SEQUENCER WIRING – BOARD REV: UPC7115-A

Wiring to the GARN WHS controller with a UPC7115A board requires a chip with version V1.21 or greater. The latest version of the chip is supplied with the purchase of the electric heating package, but if the equipment has been acquired second-hand (used), it is prudent to check the version to make sure the heating package will function correctly. Check the chip version number by looking at the label applied to the chip.

Two (2) conductors are wired from the OUT and COM connections on the board (terminals T10 and T11) to the A and B terminals, respectively, on the sequencer. The C terminal on the sequencer is unused.

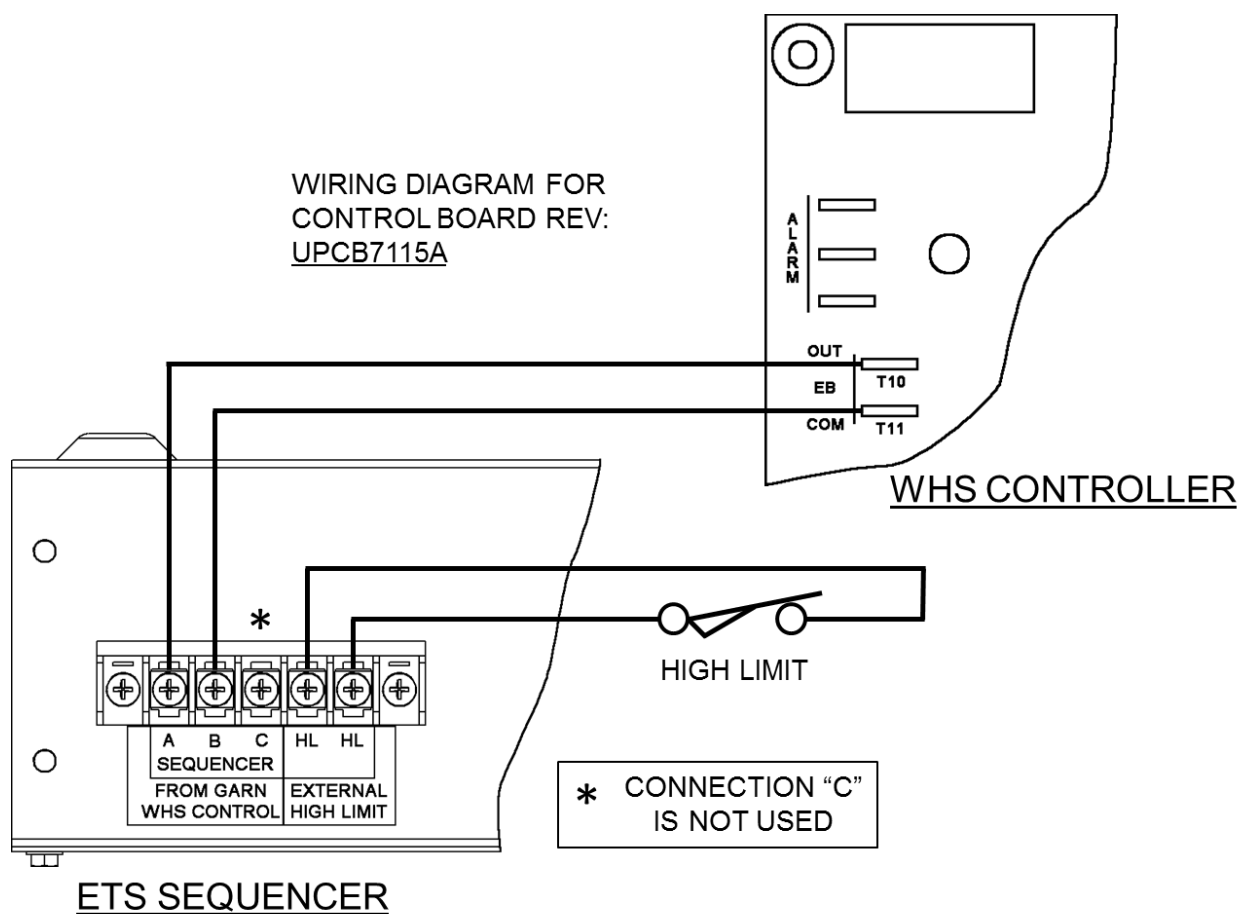


## CONTROLLER TO SEQUENCER WIRING – BOARD REV: UPC7115-C OR D

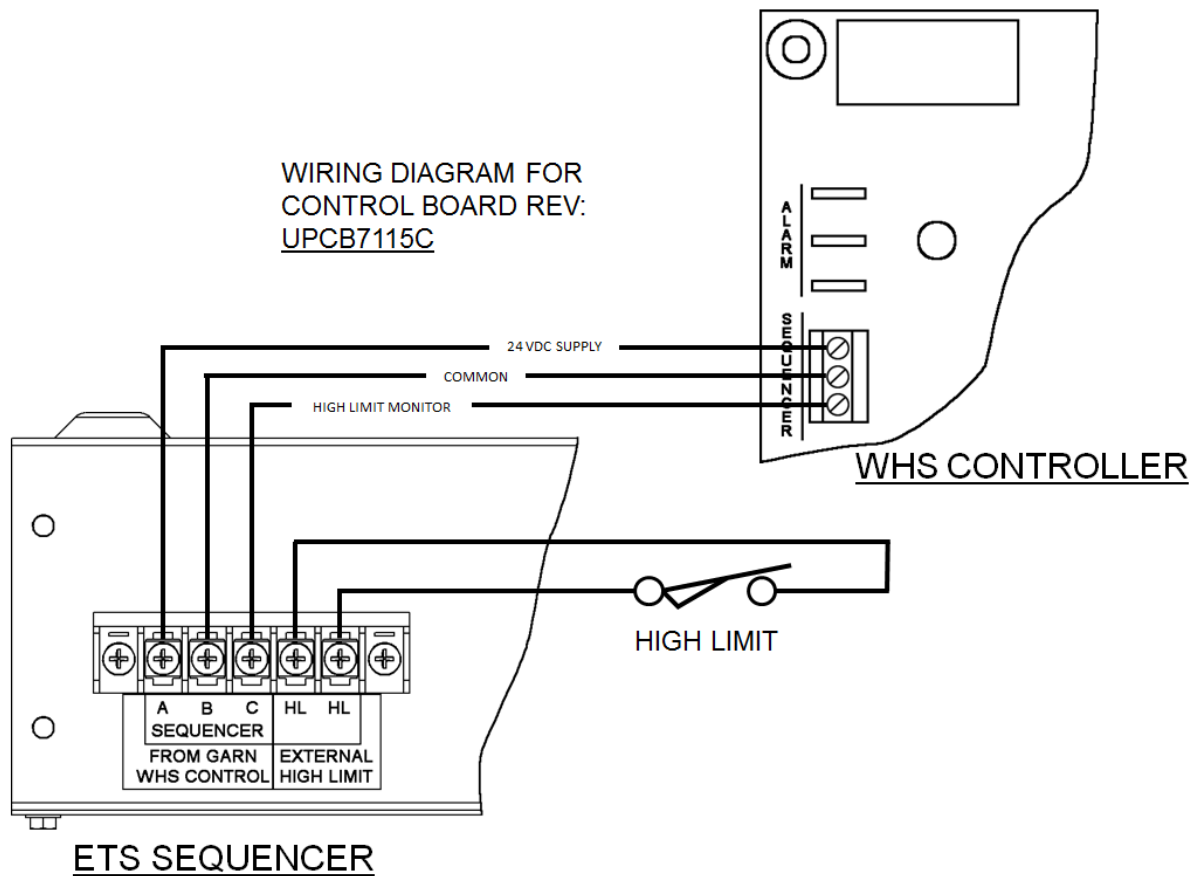

The Rev C board has three (3) wires between the controller and the sequencer. The third wire (Connection C) is the “High Limit Monitor”. The High Limit Monitor sends a feedback signal to the controller to tell the controller if the high limit is wired and working correctly. If the high limit is not wired or operating properly, a sensor error will appear on the LCD display of the controller.


## CONTROLLER TO OPTIONAL OFF-PEAK METER WIRING

The controller requires an input signal from the utility/coop that lets the controller know when off-peak electricity is available. This is accomplished through a *dry contact* provided by the utility/coop. A *dry contact* is a circuit that does not impose any current or voltage on the switched circuit. Typically a dry contact is just a pair of contacts on a relay with no current or voltage source connected. For example:

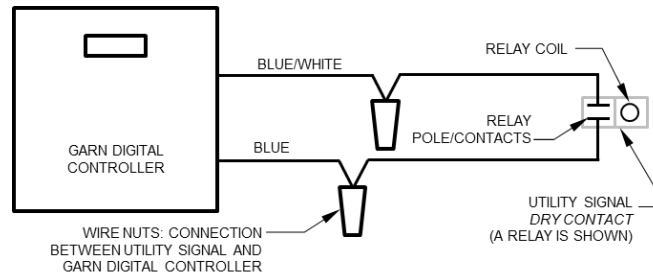

**THE CONNECTION WITH THE UTILITY MUST BE A DRY CONTACT (NOT A VOLTAGE OR CURRENT SOURCE) OTHERWISE DAMAGE TO THE CONTROLLER MAY RESULT.**

- 1.) Locate the pair of BLUE/BLUE-WHITE wires connected together at the factory with a wire nut.

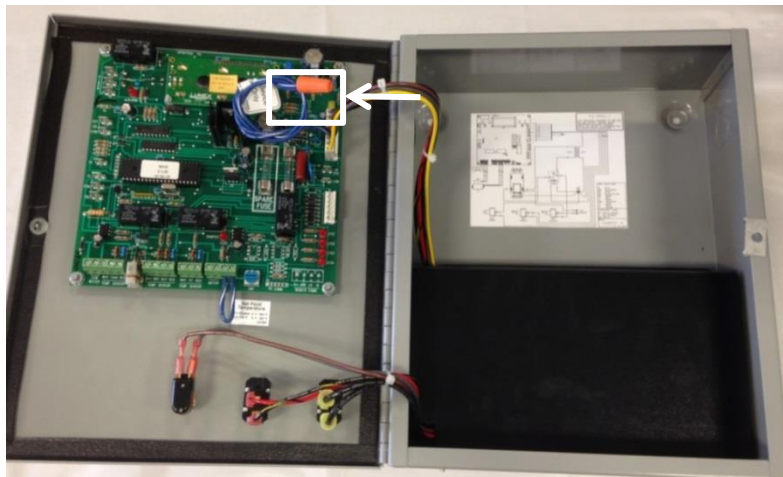


- 2.) Remove the wire nut and connect the conductors to the contacts provided by the utility.
- 3.) The controller will now turn on the elements only if the utility sends a signal that off-peak is available and the tank is below the set point temperature.
- 4.) To override the utility's signal control, reinstall the wire nut on the BLUE/BLUE-WHITE wire pair. Doing so essentially indicates to the controller that off-peak is always available.


If off peak or time of day electricity is not available at your location, or you chose not to use such, the controller can still be set to provide back up or supplemental electric heating. Simply leave the BLUE/BLUE-WHITE wire pair directly connected with the wire nut. Again, this indicates to the controller that electricity for heating is always available. All functions will operate as designed including the set point switch found on page 15.

Schematically, the removal of the wire nut and connection to a dry contact is as follows:

- 1.) Remove the wire nut from the BLUE/BLUE-WHITE wire pair.

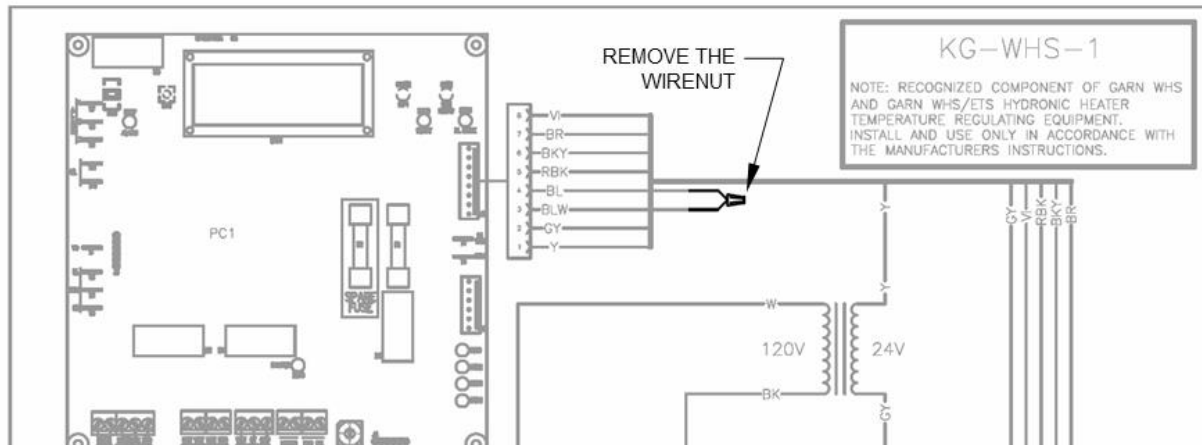


- 2.) Connect the BLUE/BLUE-WHITE wire pair to either side of a dry contact provided by the utility. The contact is closed when off-peak is available and open when off-peak is not available.

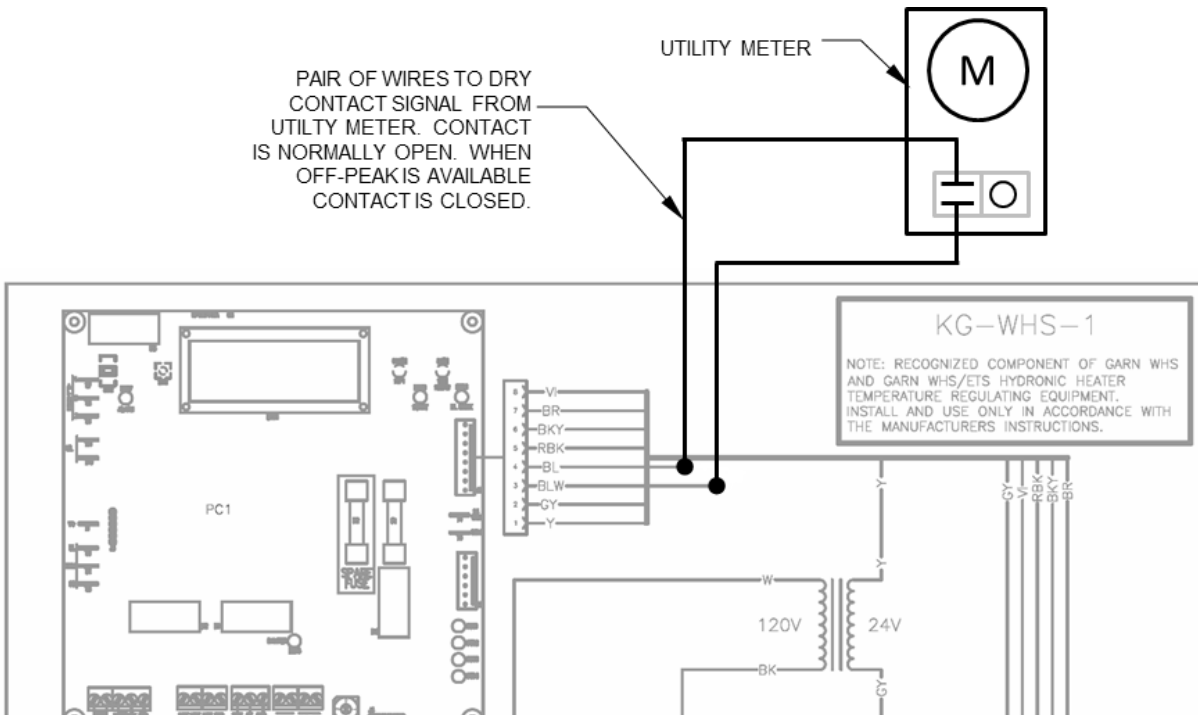

## USING AN AQUASTAT TO SET A CUSTOM DEADBAND AND SETPOINT

The digital controller comes pre-programmed with a non-adjustable 5°F deadband for all of its set points. For example, if a dial switch position of 3 is chosen (set point temperature of 190°F), and off-peak electricity is available, then the elements will turn on when the tank is at or below 185°F. The elements will remain on until the tank reaches its set point of 190°F. The elements will then turn off. When the tank drops back down to 185°F, the cycle repeats. If you wish to set a customizable deadband and set point, wiring an aquastat in series with the existing controls is a simple and cost effective way to do so. Choose the aquastat for your application and wire as the diagram shows below.

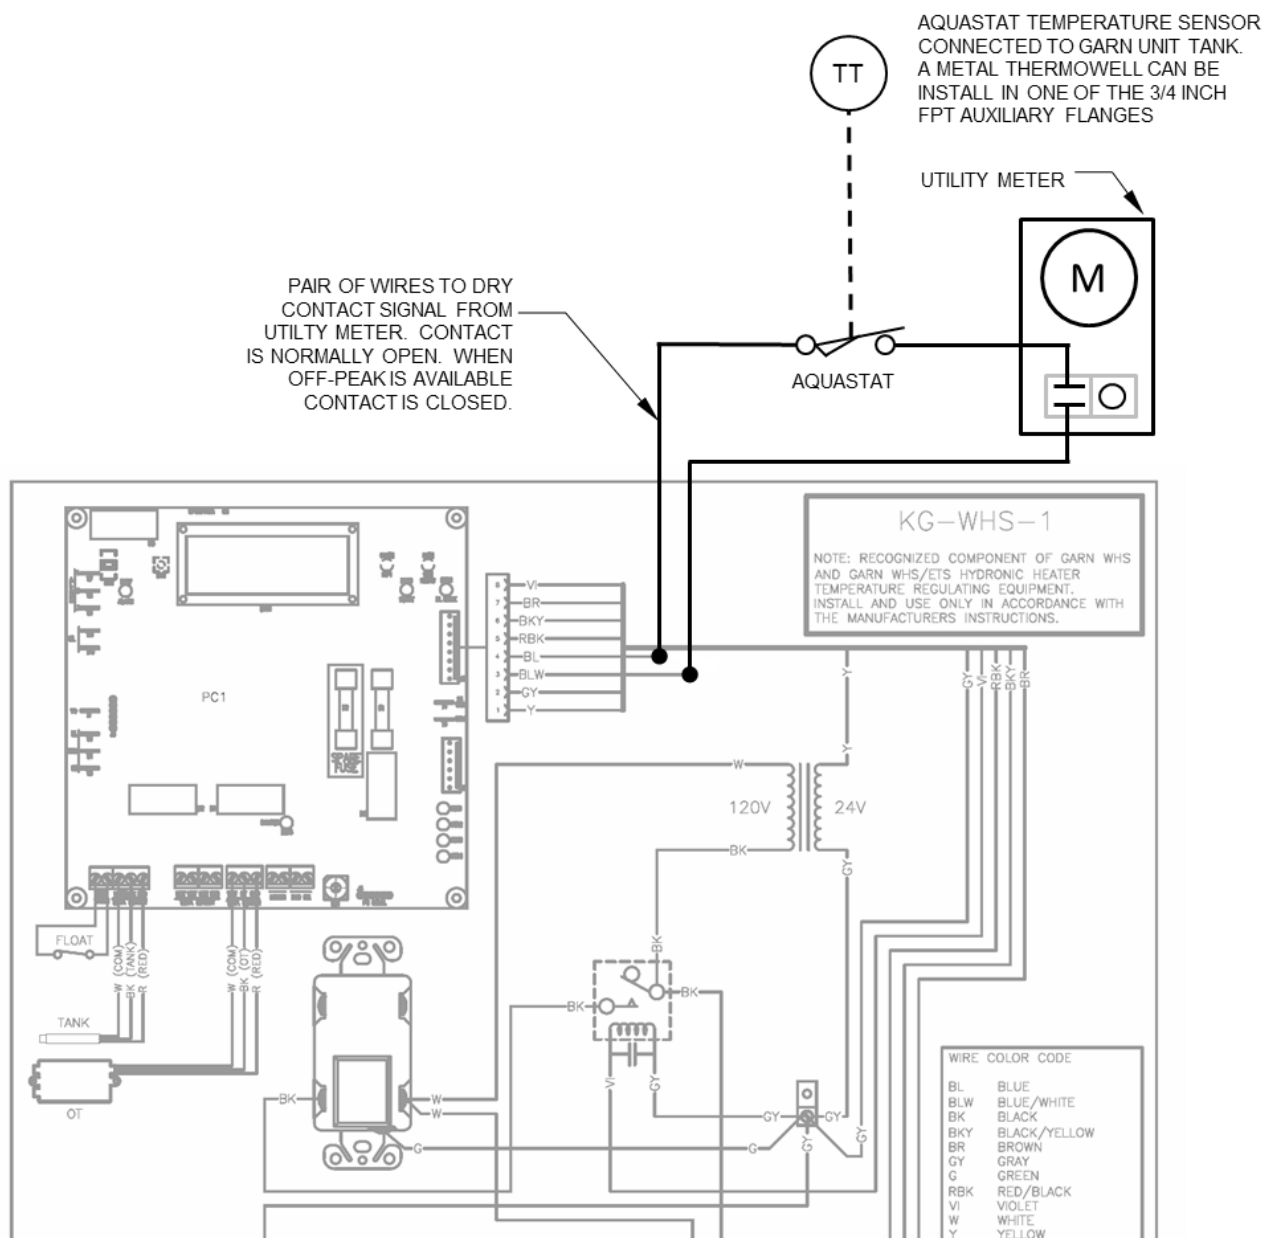

NOTE: Alternatively, the aquastat can be wired in series with the signal wire from the controller to the sequencer.

## G. WARRANTY

GARN® products are warranted by the manufacturer to be free of defects in material and workmanship as follows, with the below-enumerated exclusions:

- With respect to the controls and miscellaneous parts furnished as part of the basic unit, a one-year warranty shall apply. Warrantee begins on date of shipment.
- With respect to the sequencer and electric element box, a five-year warranty shall apply with regard to materials and workmanship. Warrantee begins on date of shipment.
- With respect to wear items such as gaskets, electric elements, O-rings, etc., a one-year warranty shall apply regarding materials and workmanship excluding normal wear and tear. Proper use and periodic maintenance will extend the life of these items.
- NO WARRANTY SHALL APPLY WITH REGARD TO EPOXY COATINGS, PAINT, CORROSION OR CORROSION INDUCED FAILURES OF ANY COMPONENT OF THE UNIT OR COMPONENTS ATTACHED TO THE UNIT. It is the sole responsibility of the owner to install, test and maintain the water treatment chemicals, and to visually inspect and remove any accumulated sludge or deposits in order to minimize corrosion potential and damage. Only visual inspection can determine the presence of sludge. Twice per year water testing is required with a copy of the results forwarded to DECTRA CORPORATION. A record of this compliance is required or warranty is VOID.
- DECTRA shall not be liable for injury, loss, damage or any expense directly or indirectly arising from the use of the products it offers for sale or from any other cause.
- This warranty does not cover any parts replacement due to shortage or damage in shipment, exposure to weather, improper installation, operating the unit under abnormal conditions, or other claims not agreed to in writing by DECTRA. Replacement parts purchased from DECTRA are warranted for ninety (90) days from the date of shipment.
- No warranty is given in connection with second-hand products and equipment, or products and equipment altered or rebuilt without DECTRA's knowledge or written approval.
- No warranty is given regarding the predicted or actual performance of any product manufactured or supplied by DECTRA.
- No warranty is given covering equipment or damages as a result of voltage spikes, lightning strikes, extended outages, etc.
- THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ANY & ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. NO WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR PURPOSE SHALL APPLY. NO WARRANTY OF LOCAL CODE ACCEPTANCE OR OF INSURANCE CARRIER ACCEPTANCE SHALL APPLY. NO WARRANTY FOR INSTALLATION OR FOR HEATING SYSTEM PARTS OR PERFORMANCE SHALL APPLY.

The foregoing warranty periods shall each commence on the date of shipment to user of the products or parts and the obligation of DECTRA with respect to such products or parts shall be limited to replacement or repair FOB point of origin, and in no event shall DECTRA be liable for consequential or special damages, or for transportation, installation, adjustment, or other expenses which may arise in connection with such products or parts. Determination of what is a defective part, assembly or product is the sole responsibility of DECTRA CORPORATION personnel. The obligation of DECTRA hereunder with respect to any products or parts shall be to replace, or at its option, to repair parts determined to be defective in materials or workmanship. Correction of any such defects by repair or replacement shall constitute fulfillment of all obligations of DECTRA to the Purchaser hereunder.

DECTRA assumes no liability for labor or any other expenses incurred by anyone without DECTRA's express written consent.

No person, agent or representative is authorized to give any additional warranty on behalf of DECTRA or assume for DECTRA any other liability in connection with any GARN® products.

**DECTRA CORPORATION • St Anthony, Minnesota 55418**

**Phone: 612-326-1100 • [www.garn.com](http://www.garn.com)**